

UNI-KIT CHIP RESETTER FOR EPSON (VERSION 5.0)

CHIP RESETTER is used to reset the chip on an Epson ink cartridge, change the property of the cartridge itself. In order to reuse an Epson ink cartridge to be both “reset” and “refilled”.

Cartridge Models: T068120* / T069120* / T069220* / T069320* / T069520* / T077120* / T077220* / T077320* / T077420* / T077520* / T078120* / T078220* / T078320* / T078420* / T078520* / T078620* / T07909 / T015 / T016 / T017 / T018 / T0100 / T026 / T027 / T028 / T029 / T038 / T039 / T040 / T041 / T057 / T058 / T066 / T067 / T0321 / T0322 / T0331 / T0332 / T0333 / T0334 / T0335 / T0336 / T0341 / T0342 / T0345 / T0346 / T0347 / T0348 / T0422 / T0423 / T0424 / T0431 /

and more.

For other models, please follow the special instructions to the right

Printer models:

EPSON PHOTO: 780 / 790 / 870 / 890 / 895 / 1270 / 1280 / 1290 / 900 / 950 / 12200 / R260* / R280* / R380* / RX580* and more... EPSON STYLUS: 770 / 775 / 780 / 810 / 820 / 925 / 830U / C60 / C61 / C62 / C64 / C66 / CX3100 / CX4200 / CX42UX / C43 / C44UX / C45 / C46 / C48 / CX1500 / C70 / C80 / C82 / CX4600 / CX5000* / CX6000* / CX5100 / CX5200 / CX5300 / CX5400 / 5500 and more...


For other models, please follow the special instructions to the right

For other models, please follow the special instructions to the right

THE UNI-KIT RESETTER

The Uni-Kit resetter should tightly contact the terminals on the chip of the cartridge, press it against the pins firmly. After a few seconds, the LED indicator will light up 2~4 times in red, if the LED turns green, it means the resetting process has been successfully completed. If the LED turns red, it could mean that the cartridge is abnormal and not resettable. Once the cartridge has been reset, install it into the printer.

For support, email: support@uni-kit.com

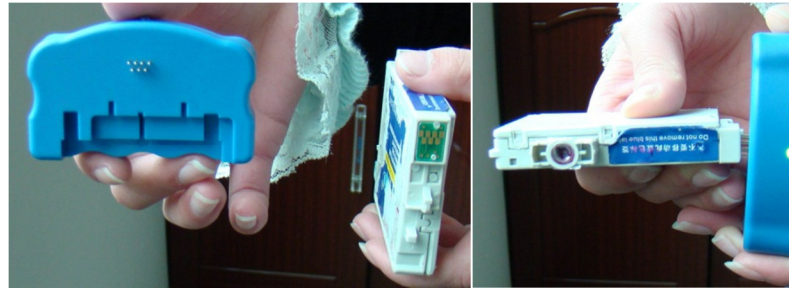

Press the terminals of the cartridge chip firmly against the pins on the resetter.

*** IMPORTANT - FOR T068 / T069 / T077 / T078 (9-PIN) CARTRIDGES**



This Uni-Kit resetter will work on 9 chip cartridges, as shown on the diagram. The 4 top pins of the resetter must make contact with the 4 top terminals on the chip; the 3 bottom pins of the resetter must make contact with the 3 center terminals on the chip (you do not need to reset the 2 terminals on the chip that are to the far right or far left). Please be sure to refill the cartridge before reinstalling it into the printer.

TROUBLESHOOTING

1. The LED in the universal chip resetter does not flash/turn green. **Answer:** Please make sure that the pins make good contact with the chip terminals (a). If the chip is not made by the original cartridge manufacturer, the resetter may not recognize it.

2. Cartridges with 9 terminals on the chip could not be recognized* **Answer:** For cartridges with 9 terminals on the chips (T068, T069, T077 and T078 cartridges), the printer reads more than just the chip when determining the ink level status of the cartridge. The printer also reads ink level sensors INSIDE the cartridge, so the cartridge needs to be both properly reset AND properly refilled in order for the printer to recognize it as full. During the refilling process, air could enter the ink level sensor areas. Make sure there is no air in the following pockets:

