

Uni-Kit Resetter for Canon CLI221 / PGI220 Cartridges

Instructions for Use

The Canon CLI221 and PGI220 cartridges use a chip, which monitors the ink level in your cartridge. After the cartridge is empty, the chip will read empty, so when you refill the cartridge you will need to “Reset” the chip so it registers as full again. Push the cartridge down so that the chip touches the contact pins of the resetter. You will see a red light shine through the resetter. Hold the cartridge in place, the light should stay red for a couple of seconds for a successful reset.



Resetter



Adapter
*(not needed when
resetting PGI220)*



Resetter+Adapter
*(combined when
resetting CLI221)*



Resetting
*(ink outlet chamber
facing down)*

For technical support, email: support@uni-kit.com

Uni-Kit Resetter for Canon CLI221 / PGI220 Cartridges

Instructions for Use

The Canon CLI221 and PGI220 cartridges use a chip, which monitors the ink level in your cartridge. After the cartridge is empty, the chip will read empty, so when you refill the cartridge you will need to “Reset” the chip so it registers as full again. Push the cartridge down so that the chip touches the contact pins of the resetter. You will see a red light shine through the resetter. Hold the cartridge in place, the light should stay red for a couple of seconds for a successful reset.



Resetter



Adapter
*(not needed when
resetting PGI220)*



Resetter+Adapter
*(combined when
resetting CLI221)*



Resetting
*(ink outlet chamber
facing down)*

For technical support, email: support@uni-kit.com