

Extracting Air from Cartridge

For Epson Models

Please have syringe that was provided with CI System ready.



Fig. 1-1



Fig. 1-3



Fig. 1-4

1. Remove cartridges from printer.
2. Place the cartridges on a flat surface as shown on Fig. 1.1.
3. To remove Air from cartridges, place syringe into ink hole as shown on Figure 1.2.
4. Once you have syringe in ink hole pull the syringe from top up (Fig 1.3), you will feel the pressure from cartridge as you pull up. Make sure not to release ink back into cartridge.
5. If you do not see anything coming out of the cartridge, this means you have to slightly move the syringe to the Left until you see the ink flow into the cartridge. Once you do this procedure you will be able to put your cartridge back into your printer.

**** After doing this procedure and installing back into your printer, please do a couple of print-head cleaning before starting to print ****