

Extracting Air Bubbles

For HP and Canon models

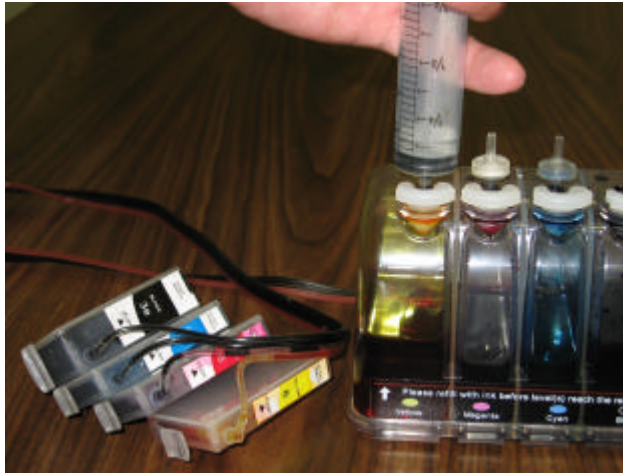


Fig 1.1: Air in yellow tubing.

1. Place C.I. System on Flat surface.
2. Get a syringe at least 30cc or larger.
3. Remove Air Breather from ink tank and Insert syringe into the ink hole.(Fig 1.1)
4. With Left hand Hold syringe tube and with Right hand hold top of syringe. Then pull syringe top up just about 2/ 3 of the way. When doing this process you will see ink and any air bubbles flow into the ink tank.
5. Hold for 15 to 20 seconds and then remove the top of the syringe(Fig 3.3). When doing this process you will see the ink flow back into the cartridge.
6. If air bubbles are still in your tube, Remove syringe from ink tank and put together syringe. Begin process again until all Air bubbles are removed from your tubing.



Fig 2.2: Air out of tubing.



Fig 3.3: Top of syringe removed