

Please be advised that some toner refill kits may be compatible with multiple toner cartridges.

TN630 / TN660

REQUIRED FOR A SUCCESSFUL REFILL:

- ☐ Toner
- ☐ 1 funnel cap

General Refilling Procedures:

Use a Flat head screwdriver to pop out the large plastic plug found on the side of the cartridge.

IMPORTANT: You must dispose of any original toner in the cartridge as much as possible before refilling. Dispose of toner properly into a trash can, or use a vacuum with a hose for best results (if possible).

Before opening the bottle of toner, turn it upside down and tap it on a table to loosen the toner and allow it to flow freely. Remove the cap and pull the seal off the bottle. Attach the funnel cap making to sure it is on tightly. Tilt the funnel cap toward the filling hole and insert it into the hole. If the toner stops flowing before the cartridge is full, simply remove the toner, close the cap, turn the bottle upside down and tap it on a table. Once the cartridge is full, seal the hole with the plug by twisting it until it is completely seated. Now gently shake the cartridge side to side to distribute the toner.

MAKE SURE YOU ALIGN THE MIDDLE GEAR AND THE FLAG GEAR AS IS SHOWN IN THE FIGURES TO THE RIGHT

FIG. F FOR TN630

&

FIG. G FOR TN660

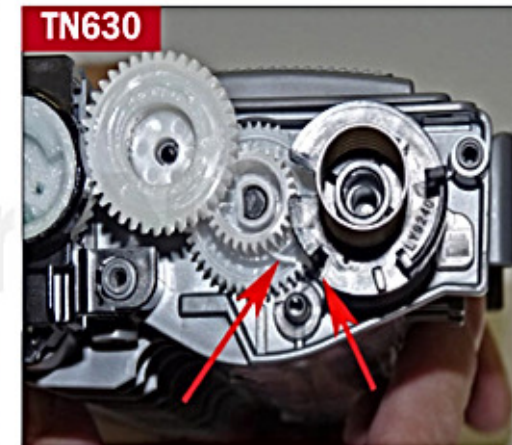


FIG. F



FIG. G